

Lift Gate Fuses

In the event a liftgate fuse fails, here is some info on where to locate them on the trucks.

In the event you are on a job and your liftgate does not work, it is possible that a fuse has failed.

In an effort to provide you with a means to fix this, replacement fuses for liftgates are now located in the glovebox of each of the trucks leased by Got Light.

There are two fuses and a reset button that can be found on the exterior of the truck.

One of the fuses is located at the battery, and the second is in a steel box just forward of the liftgate itself.

Try the battery side first as it is the easiest to access.

NOTE:

If you're in a rental and experience problems, you will need to call roadside assistance on the 800 number found in the cab or first page of your showbook.



Under the battery cover on the left side of the truck you will find a 25amp fuse that can be replaced if needed.

On the back side of this box there is a button that can be depressed to reset if tripped. Much like a GFCI.



The last fuse is located under the truck just forward of the liftgate itself. The fuse can be accessed by removing the two wing nuts and removing the steel cover.

Use caution removing the cover as it is awkward and will be overhead.



Once inside the box, the 15amp fuse is located inside this black housing. Replace if needed.

Test your liftgate before installing the cover.