

If the trucking gate on the corner doesn't close/open, here are the reset procedures:



1. Locate the reset/disconnect switch on both sides of the gates.



Continued...

2. Raise the little door and flip the reset/disconnect switch to deactivate the system.



- This will put the gate in manual mode and at that time you will be able to pull the gate open.
- This will need to be done for the opposite side if you will need to open both sides.
- Once you are done you will need to close both gates and do everything in reverse leaving the switch in the normal operation position.
- It will take a few minutes to reset the system but you should be working at that time.

Continued...

3. If everything doesn't come back online there is a lock and chain in the crew that will need to be attached to the gate to keep the gates closed.



4. Send a message via [report@](mailto:report@) to make sure we all have eyes on the issue and we can correct it ASAP.

Thank you!